



GRANDSLAM LEVER LOK TOP MOUNT RINGS

⚠ WARNING: UNLOAD FIREARMS BEFORE INSTALLATION TO PREVENT SHOOTING ACCIDENTS.

⚠ WARNING: BEFORE SHOOTING FIREARM, BE SURE SCOPE AND MOUNTS ARE ATTACHED SECURELY AND CORRECTLY ALIGNED FOR ACCURATE SIGHTING. WHEN SHOOTING WITH SCOPE OR IRON SIGHTS, BE SURE BUTTSTOCK OF GUN IS HELD FIRMLY AGAINST THE SHOULDER. FOLLOW SCOPE MANUFACTURER'S INSTRUCTIONS WHEN SETTING EYE RELIEF. DO NOT USE .22 CAL. RIMFIRE SCOPES ON CENTERFIRE RIFLES SINCE EYE RELIEF DISTANCE MAY BE TOO SHORT. FAILURE TO FOLLOW THESE PRECAUTIONS COULD CAUSE PERSONAL INJURY FROM RECOIL TO SHOOTER'S EYE AND/OR HEAD, OR RESULT IN DAMAGE TO SHOOTER'S GLASSES.

MOUNTING INSTRUCTIONS

- 1. Bases.** Use the appropriate Weaver® base(s). They are readily available where this product is sold. Refer to each product's specific instructions when mounting.
- 2. Rings.** Place each ring assembly over base(s), verifying that the recoil lug on the bottom of the ring nests in the slot of the base. Make sure the outside clamp is hooked around the outside ribs of the base(s).
- 3.** Tighten clamp to secure the ring to the base by turning the lever clockwise. Tighten until rings are firmly in place. Do not over tighten.
- 4.** Once the rings are secured the lever position can be adjusted by pulling the lever away from the ring until it clears the clamping nut, and rotating to desired position.
- 5. Remove caps from saddles.** Place scope on saddles with turret centered between the rings. Position caps over saddles and align holes. Attach cap screws and tighten to a loose fit. Make sure crosshairs of scope are vertical/horizontal and turrets are positioned to the top and to the right.

6. Setting Eye Relief. Scope optics and design determine eye relief. Refer to scope instructions for correct eye relief information. Be sure you have set proper eye relief BEFORE final tightening of cap screws.

7. Tighten Cap Screws. After correct eye relief has been determined, tighten all cap screws evenly, a little at a time, until the scope is secure. **DO NOT OVERTIGHTEN!** Over tightening may cause marring or damage to scope tube.

Note: There will be a small gap between cap and saddle. Most mounts sets may lightly dimple or circumscribe the scope tube. This is normal, will not affect performance, and is a sign of a firm, safe and accurate mounting.

8. Sighting-in. Firearm is now ready for scope sighting. Refer to scope instructions for correct procedures.

IMPORTANT: Slight movement of scope or mounts will cause gun to shoot inaccurately. Tighten all base and clamping screws to secure the components. Apply only enough torque to the hardened screw fasteners to prevent movement. Check frequently after firing to be sure there has been no movement of scope or mounts.

